

Digital EPIC


Photopolymer Plates

The Only Capped Digital Plate For High End, Full-Color Process Printing

MacDermid Digital EPIC™ is designed to meet the requirements of high end, full-color process printing, providing imaging characteristics that enable flexo to match the quality of offset or gravure printing.

Digital EPIC offers a micro-rough surface texture with excellent ink transfer for challenging flexo printing applications or unique ink requirements. The cap layer also adds an extra benefit to imaging by ensuring that the resulting plate gives you the best tonal range possible. And because it is wear resistant, you are guaranteed long run durability on press.

For truly innovative high-end capped digital printing plates, count on the company that says "Yes We Can." MacDermid.

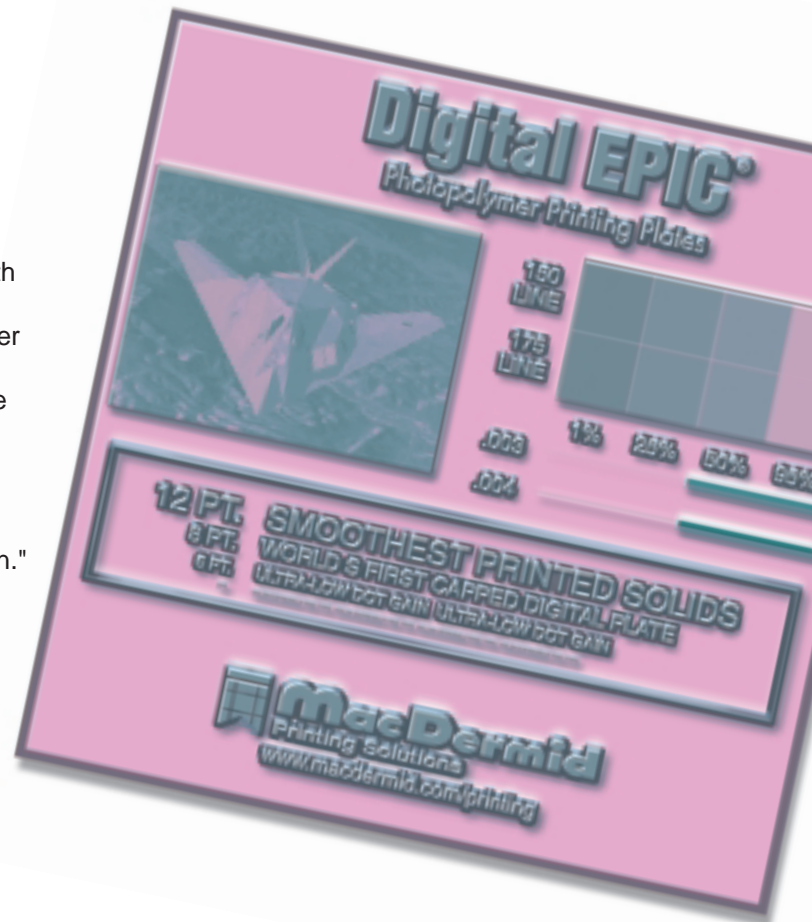


Key Features

- Excellent imaging with very low dot gain
- A balanced plate surface for low image gain and exceptional solids coverage
- Incredible durability
- Runs clean time and time again

Segments

Flexible Packaging



Folding Carton



Tags & Labels



Sacks, Paper, Multiwall



YES WE CANSM

MacDermid
Printing Solutions

Digital EPIC

Photopolymer Plates

Technical Specifications

Digital EPIC™ is available in thickness of 0.012" - 0.107" and in sizes up to 52" x 80". Please contact your JV Imaging Solutions account manager for details.

Digital EPIC has a hardness of 50 Shore A.

Reproduction capabilities

Half tones: 0.5-99% at 200 lpi (80 lines/cm)

Fine lines: 0.001 in. (0.025mm) width

Isolated dots: 0.005 in. (0.127 mm) diameter

Plate processing

Most safe-solvent solutions may be used.

Processing times for any particular job are determined by equipment, copy requirements and plate thickness

<u>Recommended times</u>	<u>.045"</u>	<u>.067"</u>	<u>.107"</u>
Back exposure (sec.)	60-80	20-30	80-100
Face exposure (min.)	12-25	12-25	12-25
Washout (min.)	6	6	6
Drying (min.)	60	60	60
Post exposure (min.)	10	10	10
Finishing (min.)	10	10	10

*Contact your JV Imaging Solutions account manager for assistance in establishing proper processing conditions.

Ink/Solvent Compatibility

Digital EPIC photopolymer is compatible with UV, alcohol, water, and glycol based inks. Digital EPIC is not recommended for use with oil-based inks or hydrocarbon solvents.

Applications

Digital EPIC is recommended for high quality printing on film and preprint liner, particularly for process color. Digital EPIC can also be used successfully in other applications such as high quality labels and folding cartons.

YES WE CANSM

It takes more than innovative, high performance products and superior technical service to help our customers compete and win in today's global marketplace. It takes a total commitment to understand their needs and the ability to provide the right solutions - every time.

When success is your only goal, trust the company that says "Yes We Can."

Distributed by:



For more information, please contact us at:

1257 f Kennestone Circle, Marietta, GA 30066

p 770.420.4006 * 800.464.2931 * f 770.420.2952

www.jvisinc.com